



Tool locking fixture – Tool Block


PIONEER's flexible, Indexable Tool Block with Interchangeable Heads.

The system is designed to prevent injury and allow operators to move the holder into the best position for manipulation. 8 locking positions at 45 degree's apart with auto lock provides the easiest and safest way of changing cutters and pull studs.


Tool Block is a must-item for all tool rooms.



How to use

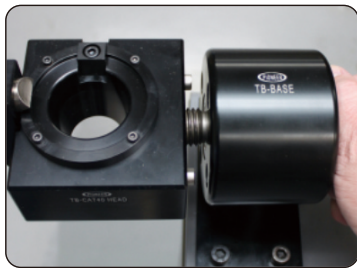

1. Assemble Tool Block Head to Base by rotating the Push Knob on the back of the Base.

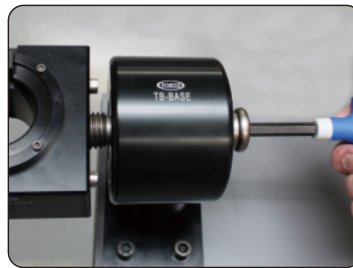

2. Tighten firmly with supplied 8mm Wrench.



3. Push in on the Push Knob to unlock the head from the base.



4. Rotate the knob to the desired location, the head will lock in 45 degrees increments.



5. The tool holder will snap in automatically.

Code No.	φShank
TB-BASE	
TB-BT30 HEAD	BT30
TB-BT40 HEAD	BT40
TB-BT50 HEAD	BT50
TB-SK40 HEAD	SK40
TB-SK50 HEAD	SK50
TB-HSK63A HEAD	HSK63A
TB-HSK100A HEAD	HSK100A



TB-HEAD



TB-BASE